

Ed

**NOTICE:**

For the need of technical improvement and system upgrade,  
information contained herein may be subject to change  
from time to time without prior notice.

Copyright © 2007  
All Rights Reserved.  
Manual Edition 1.2, Dec. 2007  
Printed in China

**Edifier**  
[www.edifier.com](http://www.edifier.com)  
EDIFIER INTERNATIONAL LIMITED  
Made in China



**MI550 Multimedia Speaker**

**User's Manual**

Please carefully read this manual before operating.

**IMPORTANT SAFETY**

Thank you for purchasing this Edifier product. For generations, Edifier tries to provide powered speakers products to our end customers, even the most demanding ones. This product can add to your home entertainment, personal theater great sound performance. Please read this manual carefully to obtain the best of this system.



The lightning bolt with arrowhead inside the triangle, is intended to alert the user to the presence of un-insulated dangerous voltage within the product's enclosure that may be of a sufficient magnitude to constitute a risk of electric shock to persons.



To prevent the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified Service personnel only.

The exclamation mark inside a triangle is intended to alert the user to the presence of important operating and maintenance information in the literature accompanying the appliance.

**SAFETY INSTRUCTIONS**

Please read all the instructions herein.  
Please heed all safety warnings.

Please adjust the volume control to a comfortable level to avoid damaging your hearing and the system.

- Do not expose this apparatus to rain or moisture.
- Do not use the speakers near water, and do not immerse them in any liquid or pour any liquid on them.

Please retain this manual safely for future reference.  
Please install in accordance with the manufacturer's instructions.

The exclamation mark inside a triangle is intended to alert the user to the presence of important operating and maintenance information in the literature accompanying the appliance.

# Wangle

English

Français

Espanol

Deutsch

g the system

## INSTRUCTION

ucts to satisfy the need of  
nal computer, and mini home



In point inside the triangle is intended  
er to the presence of important  
aintenance (servicing) instructions  
accompanying the product.

rence,  
user's instructions.


- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and from the apparatus.
- For added protection during lightning storms, unplug the speakers from the electrical outlet and turn off the apparatus.
- Unplug this apparatus when unused for long periods of time.
- Place the speakers away from all heat sources, such as heaters, stoves...and direct sunlight.
- Do not block the openings in the speaker cabinets. Never push objects into speaker vents or slots. Prevent hazards, and provide sufficient space around the speakers for proper ventilation.
- Place the speakers in a stable location so that it will not fall causing damage to the speakers or bodily harm.
- Unplug the speakers from the computer and from the electrical outlet before cleaning them with a damp cloth.
- Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, or has been dropped. Refer all servicing to qualified service personnel only.
- Use the plug or the coupler inlet to disconnect with mains.

English

## Unpack the box

### Box content

- 1 x Subwoofer
- 5 x Satellite speaker
- 1 x Wired controller
- 3 x Audio connecting cable
- 1 x User's manual

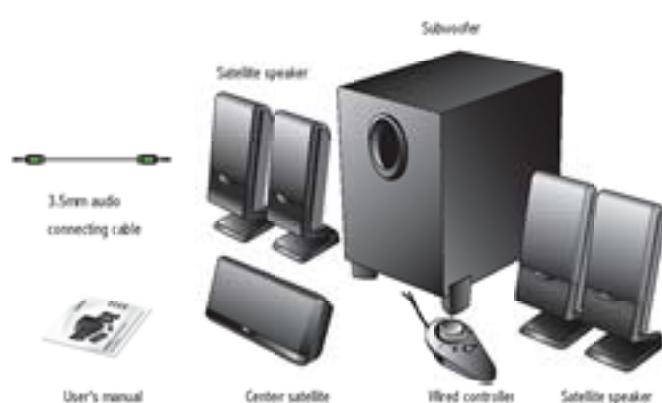


2

English

## Illustrations and Functions

- Signal input
- Speaker output
- FL: White socket, connect to front left satellite speaker
- FR: Red socket, connect to front right satellite speaker
- SL: Blue socket, connect to surround left satellite speaker
- SR: Green socket, connect to surround right satellite speaker
- C: Yellow socket, connect to center satellite speaker
- Power switch
- Wire controller
- Separate bass control
- Power cord
- Master volume control
- Headphone jack
- LED indicator
- LED ON: PLAY
- LED OFF: MUTE
- Mute button
- PLAY
- MUTE

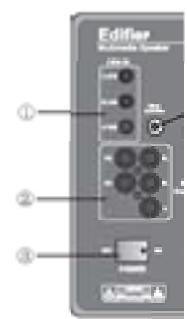

English

## Making connections



Power output:	Satellite channel: RMS 4 x 3W (THD = 10%, Center channel: RMS 4W (THD = 10%, 10 = 80%)
Signal to noise ratio:	>80dB
Distortion:	<0.5%
Input Impedance:	10kΩ

all the point where they exit:  
e computer.

risk of fire or electric shock

n.  
th.  
plug is damaged, liquid has  
does not operate normally,

1

nctional Depict



el View




d controller

3

Specification

(f0 = 10Hz)  
(30Hz)  
(2Hz)

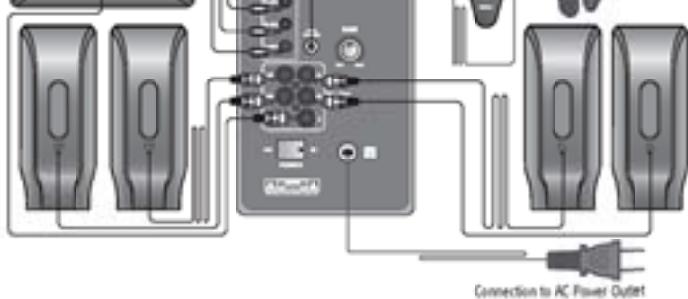

### 1. Connect the satellite speakers

Connect the RCA plug at the end of satellite speaker cable, to the "SPEAKER OUT" port on subwoofer rear panel.

### 2. Connect to audio source

Connect the audio source (Speaker-out of a PC or MP3 player) and the speaker with the 3.5mm to 3.5mm audio connecting cable.

### 3. Connect the power

Connect to power plug to the correct A.C. voltage

Input sensitivity:

Subwoofer: 10mV±20mV  
Master volume control, Separate bass control  
Bass unit: 4 inch (106mm), Magnetically Shielded, 6 Ω  
Mid-range & Tweeter unit: 50mm X 90mm, Magnetically Shielded, 4 Ω  
Dimensions:  
Subwoofer: 158(W) x 226(H) x 223(D) mm  
Front / Surround: 68(W) x 166(H) x 65(D)  
Center: 160(W) x 66(H) x 60(D) mm  
Power input: Refer to the Voltage information on rear panel  
Weight: Approx. 4.5kg

### Edifier One Year Limited Warranty

Edifier warrants to the end user that all of its computer speaker systems are free from defects in materials and of normal and reasonable use for a term of one year from the date of purchase. This warranty is the exclusive and only warranty in effect relative to Edifier multimedia speaker systems and any expressed or implied, are invalid. Neither Edifier nor any authorized Edifier reseller is responsible for any incidental or consequential damage resulting from the use of the speakers. (This limitation of incidental or consequential damage is not applicable where Edifier's obligation under this warranty does not apply to any defect, malfunction or failure as a result of misuse, use with faulty or improper equipment, or the use of the speaker systems with any equipment for which they were not designed.) Terms of this warranty apply only to speaker systems when such speakers are returned to the respective distributor where they were purchased. Under the terms of this warranty, the original consumer purchaser has certain legal rights which vary worldwide.

## Troubleshooting

### ■ Not all speakers function:

Please first check if the speaker wires are connected securely.  
Then check if the Line-in connectors are reversed; check also if the audio source is at fault.

### ■ One satellite speaker does not function when playing CD from computer:

This kind of phenomena is prone to happen in new computer systems that one satellite does not function when playing CD, but system works fine when playing WMA formatted files.  
This is mainly due to the fault connection of CD-ROM and sound card, that one channel of signal is shorted to the ground.  
Please refer to the manual of CD-ROM and sound card to adjust the wire connection.

### ■ System does not work at all

1. Please check if power is connected, and if the wall outlet is switched on.
2. Please check if the amplifier is still in STBY mode.
3. Please check if the master volume is turned to minimum.
4. Please check if the audio input cable is connected correctly.
5. Please check if there is signal from audio source.

### ■ Noise coming from speakers

Amplifier circuitry of this product generates little noise, while the background noise of some VCD/DVD player or computer sound card are too high.  
Please keep the system in active mode and remove the audio source, if no sound can be heard at 1 meter away from the system, then there is no problem with this product.

### ■ Magnetic interference

This system is complete magnetically shielded, and can be placed near TV or monitor.  
But since magnet of the subwoofer driver is large, some magnetism leakage is inevitable when the system is too close to the monitor, and it is recommended to keep a 1 meter distance between the speaker system and monitor or TV set.

### ■ If you have any further questions or concerns regarding Edifier Products:

Please visit our website at: [www.edifier.com](http://www.edifier.com), or email Edifier Support for further assistance at: [main@edifier.com](mailto:main@edifier.com). If you prefer, you may contact us by phone, Toll Free: 1-877-EDIFIER (334-3437).

il on suboffer  
e  
e  
mn  
el

workmanship in the course  
y other warranties, either  
ental or consequential damages  
re prohibited.)  
e, abuse, improper installation,  
re not intended.  
ized Edifier reseller where  
rs and may have other rights.

5

—

—

—

—



